



No. SP-A3

Service Procedure Rev. 0

Service Department

For: Air PalletPal

Issue Date: April 19, 2002

Reissue Date:

Replacement of Air Valve

1. Raise the lift, if the lift will not rise under its own power, manually raise the lift.
2. Block the roller tracks (both sides) using a 2x2 hardwood block 6.5 inches long.
Using 'C' clamps, clamp the blocks to the inside of the base angle to secure them.
3. Lower the lift down onto the blocks.
4. Open the air valve to relieve air pressure in the air bag.
5. Unscrew and remove the pressure gauge.
6. Remove the 'C' clip in front of the red adjustment knob.
7. Pull off the red adjustment knob.
8. Turn the valve stem to the right and remove.
9. Using a 7/8" open-end wrench, remove the remaining portion of the air valve.

Service Department

P.O. Box 1380

Portland, Maine 04104-1380

service@SouthworthProducts.com

Tel: (800) 743-1000

(207) 878-0700

Fax: (207) 797-4743

Caution: Before performing any service on a machine read and understand all safety instructions in the service manual. Manuals are available free of charge, if you do not have one please call the Customer Service Department at the toll free number above.