



No. SP-MS1

**Service Procedure**

Service Department

For: LS, DL, ZLS, & Lift Mats

Issue Date: April 19, 2002

Reissue Date: May 16, 2002

---

## Suggested Preventative Maintenance Schedule

\*Inspect the following:

Weekly

Leg rollers, center pivot pins and bushings, leg hinge pins and bushings for evidence of wear, loose bolts or broken cotter pins or keepers. Repair or replace as required.

---

\*Apply oil or WD-40 to non-greased pivot points or Rollers described above.

Monthly

\*Check the appearance of the hydraulic fluid.

---

\*Check all the hydraulic fittings and hoses, and repair the connections as necessary.

Every six months or  
500 hrs of operation.

\* Inspect cylinder return line and rod. Appearance of considerable fluid in the vent lines indicates a need to repack the cylinder.

\*Disassemble the down valve. Blow the plunger clean with compressed air. Reassemble and install.

\*Change oil in reservoir, clean the suction screen and vent cap. Replace return line filter element.

Notes: If holes at main pivot points are neglected and allowed to oblong, major structural problems will develop and extensive repairs will be needed.

Southworth Products Corp  
**Service Department**  
P.O. Box 1380, Portland, Maine 04104-1380  
service@SouthworthProducts.com  
Tel: (800) 743-1000  
(207) 878-0700  
Fax: (207) 797-4743

Caution: Before performing any service on a machine read and understand all safety instructions in the service manual. Manuals are available free of charge, if you do not have one please call the Customer Service Department at the toll free number above.