



No. SP-A4

Service Procedure Rev. 0

Service Department

For: Air Lift Tables

Issue Date: September 23, 1998

Reissue Date: June 6, 2002

Lock-Out Procedure

To Safely Lock Out

- 1) Raise the machine to its full up position.
- 2) Insert maintenance chocks located at the base of the machine.
- 3) Lower the machine down on to the maintenance chocks, releasing hydraulic pressure.
- 4) Locate the air valve (in airline before the hand or foot control) exhaust all air at the valve, and lock out the valve.

To Operate Machine

- 1) Ensure all personnel and tools are free from the machine.
- 2) Unlock safety valve.
- 3) Raise the machine to its full up position
- 4) Remove both maintenance chocks from the base frame.
- 5) Operate the machine within its lifting capacity.

Service Department

P.O. Box 1380

Portland, Maine 04104-1380

service@SouthworthProducts.com

Tel: (800) 743-1000

(207) 878-0700

Fax: (207) 797-4743

Caution: Before performing any service on a machine read and understand all safety instructions in the service manual. Manuals are available free of charge, if you do not have one please call the Customer Service Department at the toll free number above.