



No. SP-S2

**Service Procedure Rev. 0**

Service Department

For: LS, LST, LSH, DL, Models

Issue Date: 8/14/00

Reissue Date:

---

## Changing Upper Leg Rollers

1. Raise the machine and place maintenance devices into place accordance with the instructions in your owner's manual.
2. Lower the lift onto the maintenance devices, depress the down control button a couple of times to release the hydraulic pressure from the system.
3. Holes may be needed to be drilled/ burned through the skirt of the platform, and the roll retainer (angle under the platform next to the rollers) to provide adequate holes for removing the roller shaft.  
*Note: For LST models support the platform on both ends securely before removing the hinge pins*
4. Wedge each of the roller legs away from the platform just enough to take the load off the rollers.
5. Remove cotter pins and washers from both ends of the roller shaft. (It may be necessary to remove any paint from the roller shaft or it may be easier to cut the old roller shaft in pieces to remove).
6. Insert replacement shaft, roller, washers and cotter pins.
7. Raise the lift and remove maintenance devices. Cycle the lift and check rollers for proper alignment.

Southworth Products Corp  
**Service Department**  
P.O. Box 1380, Portland, Maine 04104-1380  
[service@SouthworthProducts.com](mailto:service@SouthworthProducts.com)

Tel: (800) 743-1000  
(207) 878-0700  
Fax: (207) 797-4743

Caution: Before performing any service on a machine read and understand all safety instructions in the service manual. Manuals are available free of charge, if you do not have one please call the Customer Service Department at the toll free number above.