

## Changing Leg Rollers

**Notice:** Before performing any service on a machine, read and understand all safety instructions in the owner's manual. Manuals are available free of charge. If you do not have one, please call the Customer Service Department at the toll-free number below.

### WITH LIFT IN THE FULLY LOWERED POSITION:

1. Pick up roller end of platform. Platform will separate from rollers.
2. Lift end of platform up as high as possible without the opposite end hitting the floor.
3. Insert a block between platform and leg assembly.
4. Blocking should be oak or other hardwood and should span across both legs to evenly support the platform.
5. Pick up roller end of both sets of legs: raise out of lower frame enough to allow removal of rollers.
6. Place block across base under legs.
7. Change rollers.
8. Follow directions in reverse.

### Southworth Service Department

P.O Box 1380

Portland, Maine 04104-1380

[Service@SouthworthProducts.com](mailto:Service@SouthworthProducts.com)

Tel: (800) 743-1000

Fax: (207) 797-4734